

Installation Manual

CARGOBLOCK

**The anti-theft for light commercial
vehicles' rear and side doors**



CARGOBLOCK Cod. 0001070001802



Iveco Daily

A– INTRODUCTION

The purpose of this Handbook is to provide guidelines for a correct installation of **CargoBlock** on a commercial vehicle. It is advisable to carefully follow all the procedures contained in this manual, essential to correctly install the anti-theft device.

Attention: information given below are made available by the Services Department and are indicative. They always require a post installation verification.

StarBlock disclaims all liabilities for any damage incurred to the vehicle for incorrect installation or for failure to follow Instructions.

B– GENERAL GUIDELINES

CargoBlock installation has been tested on vehicles following Assembly instructions which are analyzed in this guide.

Product warranty registration is required on the website:
www.starblock.it

C – TECHNICAL FEATURES

It is the anti theft device for the rear and side doors of light commercial vehicles.

Reliable for its light alloy composition. It is made of aluminum with **preformed** and **pre-drilled** stainless steel plates.

Thanks to its design and technology it is practical and easy to install. It is equipped with plates dedicated to the fixing system of each vehicle.

No holes and no changes are made on the doors.

The device is installed on the lock studs.

CargoBlock is equipped with **StarBlock®** lock with proprietary technology and non duplicable profile key.

Patent n° **202016000071343**

D – MAINTENANCE

The maintenance of the product concerns only the periodic cleaning of the lock, through the use of compressed air in the lock hole to eliminate any deposits of dust and lubricating spray.

Maintenance is recommended every six months or more frequently if you work in environments where dust, sand or other similar material are high.

E - BOX CONTENTS

1. Rear door plate, left side




2. Rear door fixing plate, right side



3. Side sliding door plate



4. Side door fixing plate

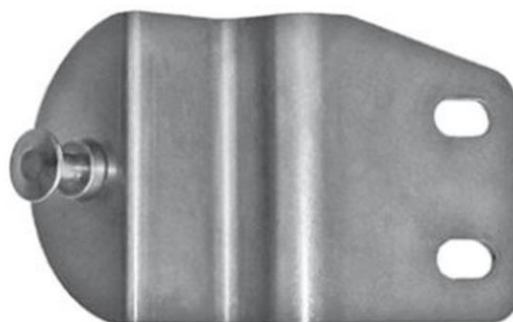

5. Accessory: stud diameter 6mm



6. Stud M6X20



F – INSTALLATION GUIDE

1 – Rear door, left side

- Unscrew the torx screw securing the lock;
- Tighten the 6mm diameter stud to prevent the lock from coming loose during installation, then unscrew the two torx screws (**img. 1**);
- Position the rear door plate on the left side in correspondence with the lock fixing holes and screw the original screw in the lower part and the M6x20 screw supplied in the upper part (**img. 2**);
- Unscrew the stud and screw in the other lock torx screw (do not screw in the screws completely for final adjustment of the plate).



img.1



img.2

2 – Rear door, right side

- Before unscrewing the hook, mark its original position with a felt-tip pen (to facilitate reassembly). Finally unscrew the two torx screws that secure the hook (**img. 3**);
- Position the rear door fixing plate on the right side, reposition the hook and tighten the two torx screws. **Caution:** do not pinch the gasket between the edges of the door and the plate and do not tighten the screws completely for final adjustment of the plate (**img. 4**);
- Align the two doors and check that the plates are aligned. Ensure that the plate adheres well to the door wall. Then tighten all screws securely (**img. 5**).



img.3



img.4



img.5

3– Side sliding door plate

- Unscrew the torx screw securing the lock and screw in the stud to prevent the lock from coming loose during installation;
- Unscrew the other two torx screws (**img. 6**);
- Position the side sliding door plate at the holes and tighten the two torx screws;
- Unscrew the stud and tighten the other torx screw (do not tighten the screws completely for final adjustment of the plate) (**img. 7**).



img.6




img.7


4– Side door fixing plate

- Before unscrewing the hook, mark its original position with a felt-tip pen (to facilitate reassembly). Finally unscrew the two torx screws that secure the hook (**img. 8**);
- Position the side door fixing plate at the holes and reposition the hook in its original position;
- Fix the two torx screws (do not tighten the screws completely for final adjustment of the plate) (**img. 9**);
- Apply the two doors and check that the plates are aligned and that the plate adheres perfectly to the side wall (**img. 10**). Finally, tighten all the screws.

img.8

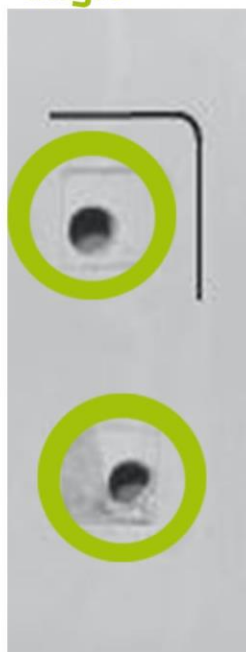

img.9

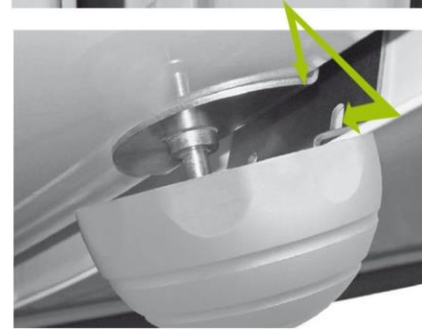

img.10



ST AUTOMOTIVE SRL
Ss 96 Strada Vicinale
Lamarossa snc - 70026 Modugno (BA)
T. +39 080 2143503 - F. +39 080 9692317
info@starblock.it



starblock.it